


SSM-Metric

CALIBRATION CERTIFICATE INSTALLATION INFORMATION

INSTALLATION DIMENSIONS

(mm)

MODEL	Α	В	С	D
SSM-200N	64	51	22	M6 x 1 - 6H
SSM-500N, 1000N	64	51	19	M6 x 1 - 6H
SSM-2000N,5000N,10kN	76	51	32	M12 x 1.75 - 6H
SSM-20kN	89	64	44	M16 x 2 - 6H

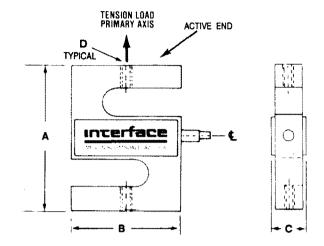


ELECTRICAL INFORMATION

The SSM-200N through SSM-1000N are supplied with a 4-conductor shielded cable (AWG 28) 3m long. The SSM-2000N through 20kN load cells are supplied with a rugged cable (PVC Jacket AWG 22) 3m long, or a Bendix PC04E-10-6P connector. A mating connector, PC06W-10-6S is available at additional cost.

Wiring Color code complies with ISA S37.8 "Specifications and Tests for Strain Gage Force Transducers" and SMA Load Cell Terminology.

(8	Connector (SSM-2000N-20kN)		Cable All Models)
Pin	Function	Color	Function
Α	+ Excitation	Red	+ Excitation
В	+ Output	Green	+ Output
С	- Output	White	- Output
D	- Excitation	Black	- Excitation
Ε	No Connection	Shield	No Connection
F	No Connection		

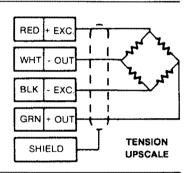

APPLICATION NOTES

- The Sealed Super-Mini load cell is specifically designed for outdoor usage and thus can be used in scale pits and batching plants or other locations that are directly exposed to the weather.
- At least one diameter thread engagement is desirable; normal engagement is shown below:

SSM-200N,SSM-500N, SSM-1000N SSM-2000N, SSM-5000N, SSM-10kN SSM-20kN

6mm to 12mm 12mm to 16mm 16mm to 20mm 3. Jam nuts may be used, however care should be exercised to not apply excessive torque across the load cell. Torque should be reacted against the load cell structure immediately adjacent to the jam nut and should not exceed the following recommended torque: SSM-200N 2.2N·m (0.2 kg·m)

SSM-200N SSM-500N,SSM-1000N SSM-2000N, SSM-5000N

SSM-10kN SSM-20kN 4.5N·m (0.5 kg·m) 22.5N·m (2.3kg·m) 90N·m (9.2 kg·m) 113N·m (12 kg·m)

4. The force to be measured should be applied to the active end of cell to eliminate possible errors due to cable interaction. The active end of the cell is separated from the cable/connector side by the slot (cutout) in the flexure (the serial number is always shown on the inactive side).

BOTTOMING OUT OF THE MOUNTING STUD CAN CAUSE IRREPARABLE DAMAGE TO THE LOAD CELL.

PERFORMANCE DATA

METRIC SEALED SUPER-MINI LOAD CELL



INTERFACE, INC.
7401 E. Butherus Dr.
Scottsdale, Arizona 85260 U.S.A.
Telephone (480) 948-5555 • FAX (480) 948-1924
www.interfaceforce.com

WARRANTY & CERTIFICATION STATEMENT ON OTHER SIDE